


FIREFLY™


INSERTION AND REMOVAL INSTRUCTIONS

Unmated (Latch Open)


- 1 Align optical or copper assembly so that notches in PCB are over the positive latching receptacle.

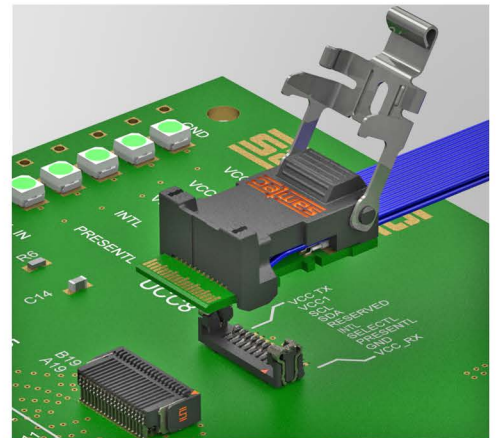


- 2 Drop cable assembly down keeping it parallel to the board.

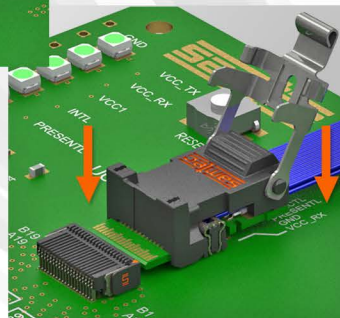

- 3 Slide cable assembly forward until engaged, keeping it level with the board.

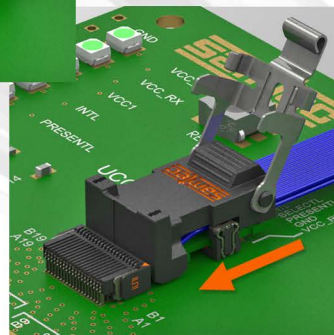

- 4 Rotate latch downwards until parallel to board.

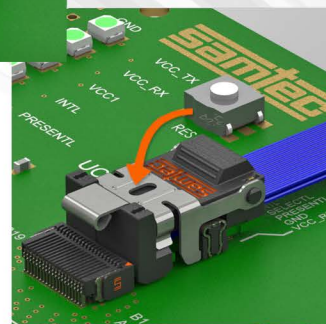

Mated (Latch Down)

- 5 Depress latch to lock cable assembly into the connector. Removal is reverse of installation.

